


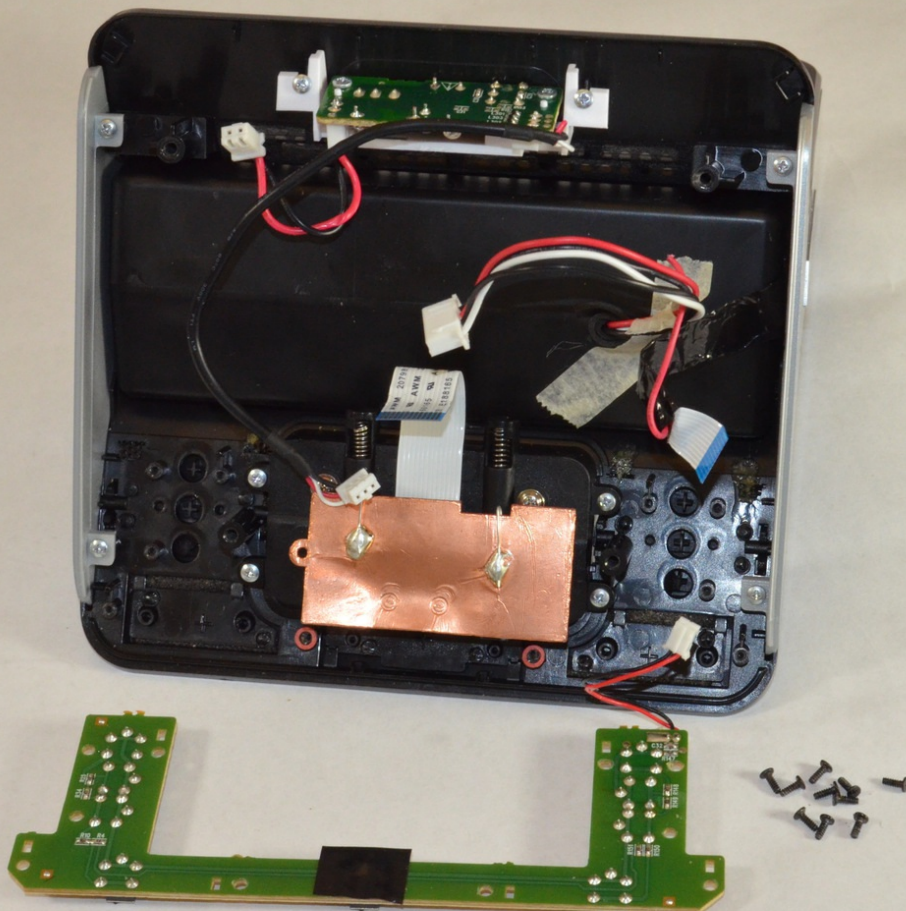

# Philips DC320 37 Bottom Button Circuit Board Replacement

This guide outlines how to remove and install the bottom button circuit board for the Philips DC320/37.

Written By: Greg Lane



## INTRODUCTION

Follow the procedure outlined in this guide to remove and install the circuit board for the device's bottom buttons.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Bottom Panel



- Pry off the four white feet with the pointed end of the spudger

## Step 2



- Unscrew the four 15.5 mm Phillips #2 screws that hold the bottom panel to the dock.





## Step 3



- Use the flat end of the spudger to pry the lid off from the two connectors holding it to the body of the dock.

⚠ The connectors on the panel are fragile and may break.

## Step 4

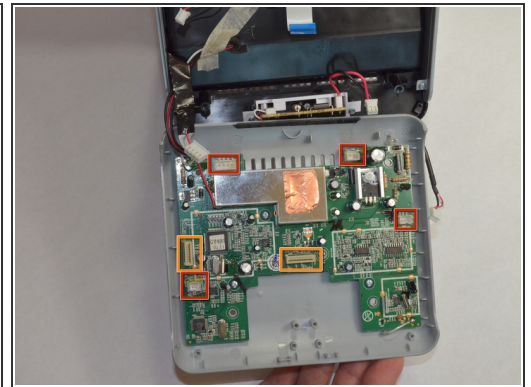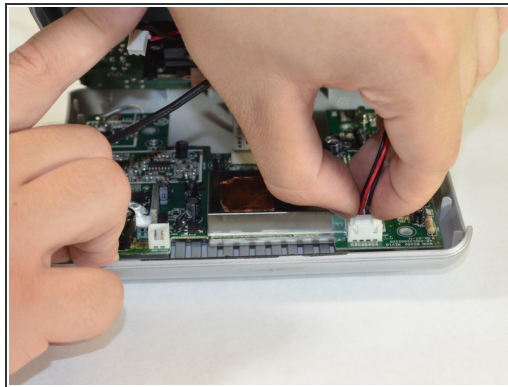


- Carefully pull up and out the four electrical connectors and the two ribbon connectors connecting the bottom panel and the dock.

- Electrical Connectors
- Ribbon Connectors

⚠ The cables do not have a lot of slack in them. Be careful not to break the connectors.


⚠ One wire is soldered onto the bottom panel. Be careful not to break this bond.

## Step 5 — Bottom Button Circuit Board

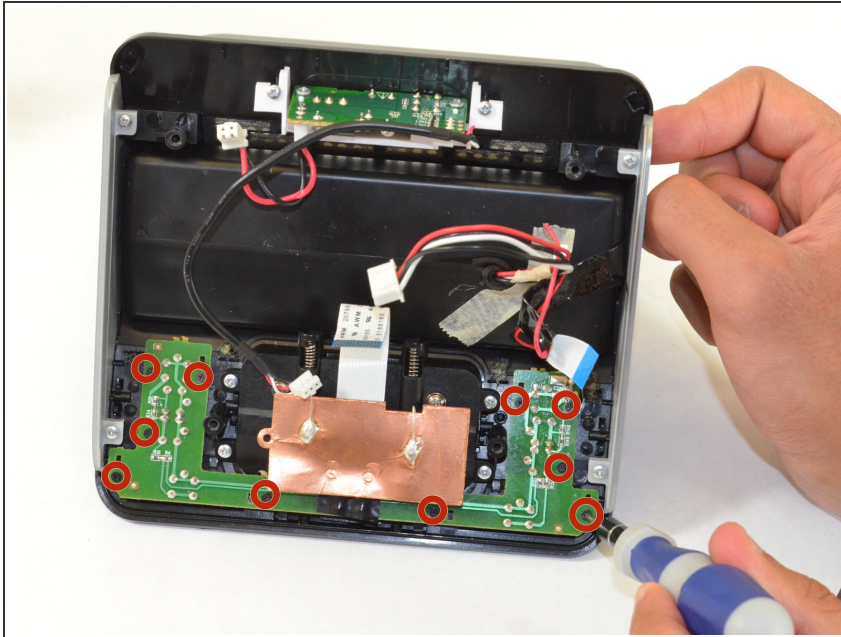

- Unscrew the ten 6 mm Phillips #00 screws holding the board in place.

## Step 6

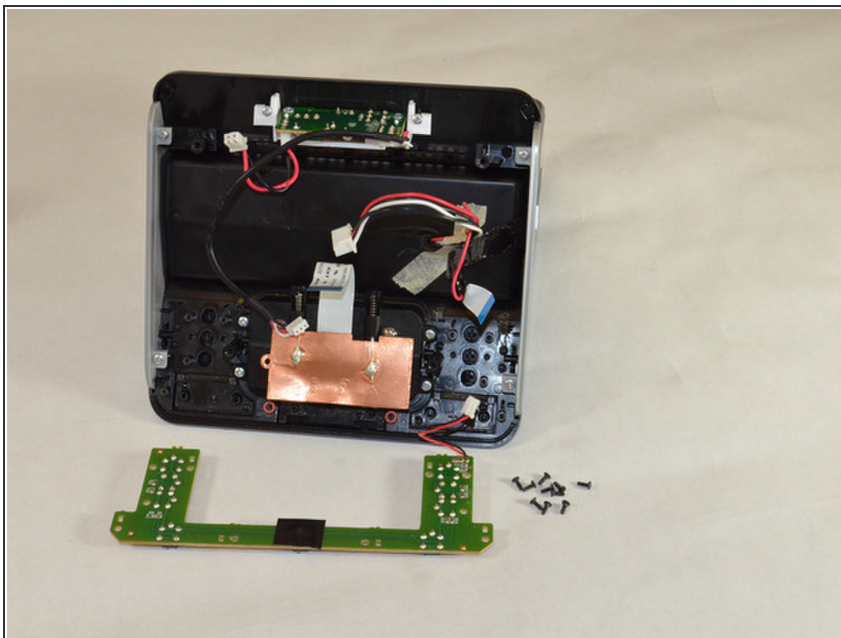

- Pull the board out from the dock

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 11:26:13 AM.